HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
FENDERWELL TRIM **2-DOOR: P/N 08P21-S82-101** **4-DOOR: P/N 08P21-S84-100**	**1999 ACCORD** **2- AND 4-DOOR**	**AII 20005** Issue Date **SEP 1998**

PARTS LIST

Left front fenderwell trim

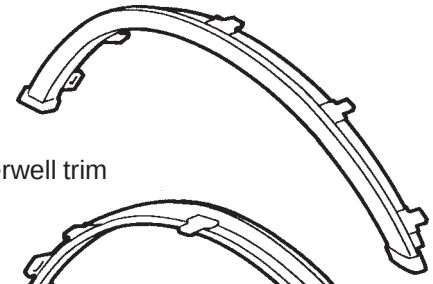

Right front fenderwell trim

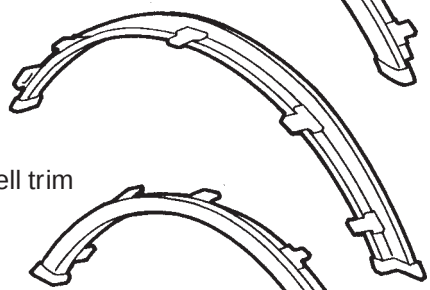

Left rear fenderwell trim

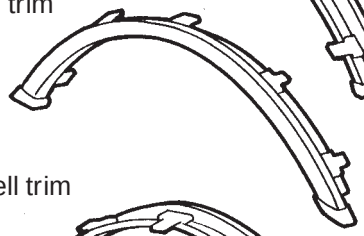

Right rear fenderwell trim

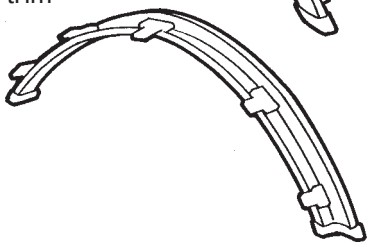

TOOLS REQUIRED

Flat-tip screwdriver
Pliers
Shop towel

INSTALLATION

NOTE:

- In these instructions, the illustrations show the right fenderwell trims being installed. The same procedure applies to installing the left fenderwell trims.
- The fenderwell trims are identified by a label attached to the inside surface.

Installing the Front Fenderwell Trims

1. Remove the four expansion clips securing the inner fender.

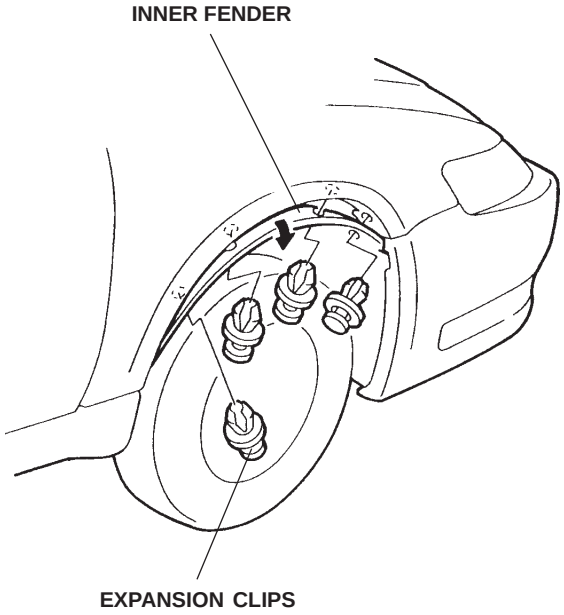

2. Clean the area to be covered, and wax it with a high-quality paste wax.

1998 American Honda Motor Co., Inc - All Rights Reserved.

3. Pull down the inner fender, and position the fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper as indicated by the arrow.

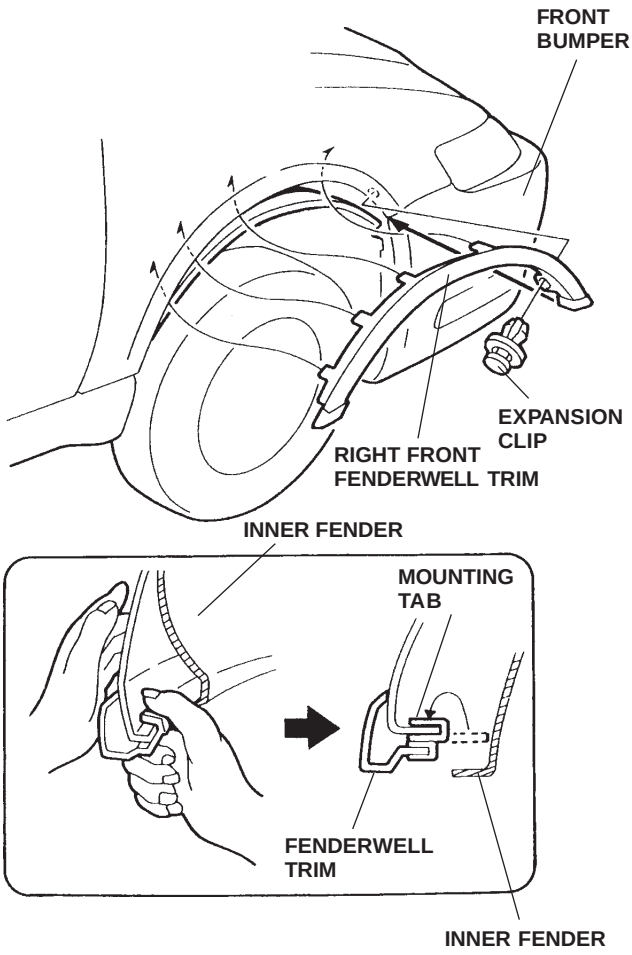

4. While holding the fenderwell trim firmly against the fender, squeeze the four mounting tabs around the fender flange as shown. If necessary, use pliers over a shop towel to bend the mounting tabs around the fender flange.

5. Attach the front of the fenderwell trim and the inner fender to the front fender with one expansion clip removed in step 1.

6. Reinstall the three remaining expansion clips to secure the inner fender.

7. Repeat steps 1 through 6 to install the left front fenderwell trim.

Installing the Rear Fenderwell Trims

8. Position the fenderwell trim on the fender flange, and align the rear end with the rear bumper. Hold the fenderwell trim firmly against the fender, and bend the five mounting tabs around the fender flange.

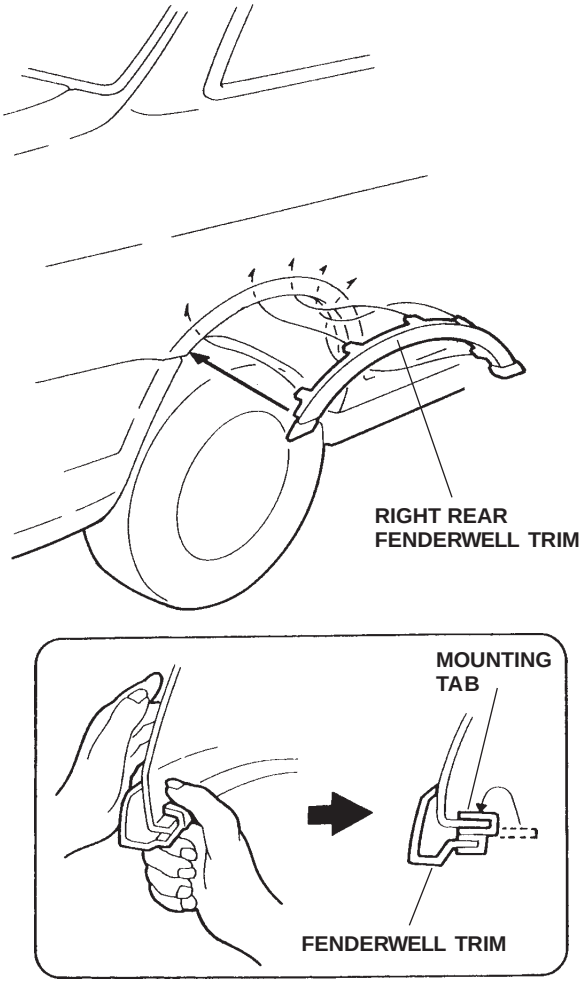

9. Repeat step 8 to install the left rear fenderwell trim.

AII 20005 (9809)
1998 American Honda Motor Co., Inc - All Rights Reserved.